

Instruction manual

green house

Precautions for safe and proper use

(Please read this manual carefully before using this product.)

DANGER! Failure to observe the precautions in this indication may result in death or serious injury.

If defects such as smoke, heat, unusual smell, or unusual noises occur, turn the power off and stop using it. If you continue to use it, it may result in fire, injury, or burns. After confirming that there is no longer smoke, heat, unusual smell or noise, remove the batteries and contact the shop where you purchased the product.

WARNING! Failure to observe the precautions on this indication may result in death or serious injury.

- Do not use it in areas with insufficient ventilation.
- Do not directly inhale the smoke generated during use.
- Do not place it near gas cylinders or hairspray.
- Do not use it on highly flammable items such as carpets, tatami mats, tablecloths, etc. or low heat resistant items such as glass, plastic, etc.
- Do not leave the area while in use.
- Do not put anything other than smoke chips in the chip pocket.
- Do not disassemble the unit except to load batteries or clean the unit.
- Do not make alterations.
- Do not dump, plunge, throw, or drop it.
- It should only be operated by a parent or guardian so that children and infants are not unsupervised.
- Do not place it in an unstable location.
- Do not place it in a high temperature area, such as near a heat appliance or in direct sunlight.
- Be sure to insert the specified battery in the specified direction before using it.
- Do not use a combination of different types of batteries, such as unused and used batteries, or batteries from different manufacturers.
- Once the battery is set, close the battery cover securely.
- When not in use for a long time, remove the batteries.
- Do not heat the battery, disassemble it, or put it in water or fire.
- Keep the batteries out of the reach of children and infants.
- Do not put the unit in the refrigerator.
- Do not use in the microwave oven.
- Do not use for any other purposes.
- Do not use it for business purposes or continuously for long time.

CAUTION! Failure to follow the precautions on this display may result in injury or damage to property.

- Do not directly touch the unit during or after use, as it becomes hot.
- Do not look down on the unit while in use.
- Do not cover the unit with a cloth or towel while in use.
- Be sure to install all units securely.
- Do not use the tube when it is pinched or crushed.
- Do not lift, tilt, shake or knock down the product body after setting the smoking chip.
- Always wash the main unit, chip pocket, tube before and after use to keep it clean.
- Do not wash the body unit since the electronic components are installed inside.
- Use dish detergent to clean the upper unit, tube, and do not use solvents or industrial detergents such as benzine or thinner.
- Use a soft sponge to clean the upper unit, tube, and do not use a metal scrubber, polish, cleanser or chemical razor.
- Do not rinse the body unit with water.
- For severe stains, soak a soft cloth in water and wring it out thoroughly before wiping it off.
- Do not use dishwasher or dish dryer.
- After cleaning, please dry well.

Restrictions

- Please read the caution notes on the smoking chips and food products carefully.
- Use a cleaning brush to remove any ashes or burning debris left in the chip pocket immediately after use.
- Batteries not included.
- Do not use this product for business purposes.
- All other company and product names are trademarks or registered trademarks of their respective owners.
- The design and specifications of the product are subject to change without notice due to improvements.
- The color of the product image may differ from the actual product.

Disclaimer

We are not responsible for the use of the product if it is not used in accordance with the instructions in the instruction manual or packaging. We are not responsible for any damage caused by external factors such as drops, shocks, pressure, or loads. We are not responsible for any damage caused by natural disasters such as fire, earthquake, lightning, wind and water damage. We are not responsible for any failure due to wear from use. We cannot be held liable for any loss of business profit associated with the use of the product. We are not responsible for any failure of the related equipment during use of the product. We are not responsible for any inability to use the product due to compatibility with the relevant equipment.

Requests for Use - For a long life of use -

Product Handling

- Please read "Safety Precautions" on this manual carefully.
- Please be careful during use since the unit becomes very hot.

About the smoking chips used

- Please use about 0.197 inches size smoking.
- Some types of smoking chicks may not cook well. (Do not use extremely small or large ones because those may not cook properly or cause a fire.)
- Please take extra care when handling hot smoking chips.


About Maintenance

- For a long life of use of the product, please take care of it after use and always keep it clean.
- Remove the batteries from the unit and wait the unit to cool down before cleaning.
- Do not wash the main unit in water.


- It cannot be boiled or washed in a dishwasher or dish dryer.
- Use a soft cloth or sponge to lightly wipe off any dirt on the outside of the body.
- For severe stains on the outside of the body, soak a soft cloth or sponge in lukewarm water diluted with neutral kitchen detergent and wring out well before wiping.
- Use the supplied brush to remove ashes and dust from the inside of the unit and the upper unit.
- Please wash the tubes in water.
- Do not use chemical rags, strong detergents or solvents such as benzine or thinners.
- Do not use insecticides or exerting properties.
- Do not allow rubber or plastic to come in contact with the body for long periods of time, or leave stickers or tape on the body.
- If you are not going to use it for a long period of time, remove the batteries.

Contents

Please make sure you have all of the following in your package.

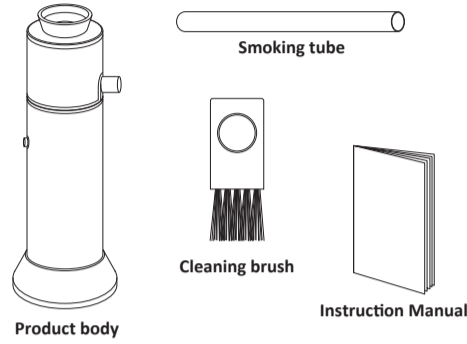

Name of each part

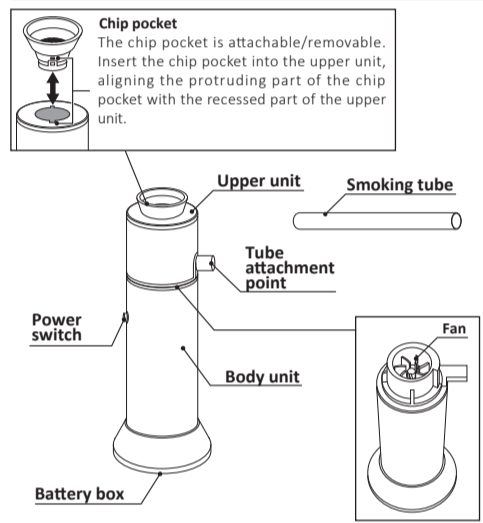

Before Use

What to prepare


- Product body
 - Smoking tube
 - Smoking chips
 - Ignition tools (ignition lighters, matches, etc.)
 - Ingredients
 - Container to seal the food and smoke.
- *We recommend "zippered plastic bags" or "plastic wrap and bowls."
About 7.87 x 7.09 inches zippered plastic bag of smoking chips is for one time.
- two AA alkaline batteries.

After take it out from the package

After take it out from the package, please clean the unit and each part before using.
For maintenance, please refer page 12.

About Batteries

- Insert the batteries according to the positive and negative directions on the battery box.
- Please use two AA alkaline batteries.

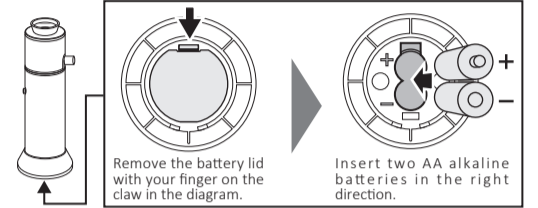


Power on/off

With the battery inserted, press the power button and the fan will rotate to start sucking and blowing air.
Please refer to the instructions on page 8 for proper use.


How to Use

1. Clean the upper unit with the supplied brush to make sure no dust or ashes remain.

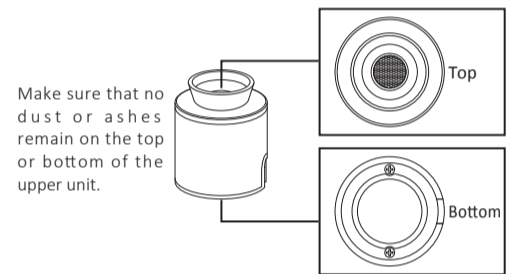


Make sure that no dust or ashes remain on the top or bottom of the upper unit.


2. Set the upper unit in the main unit, place it on a flat place, and attach the smoking tube to the tube attachment point.

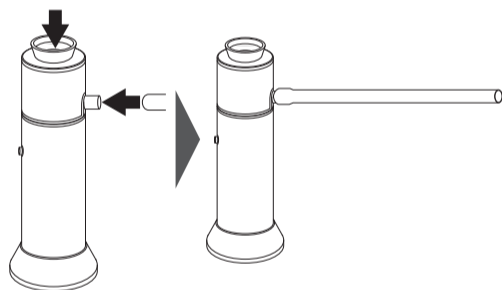


3. Put the ingredients in a container.

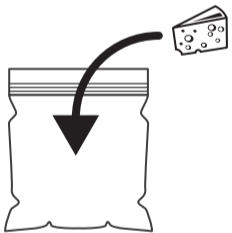

4. Insert the smoking tube into the container.

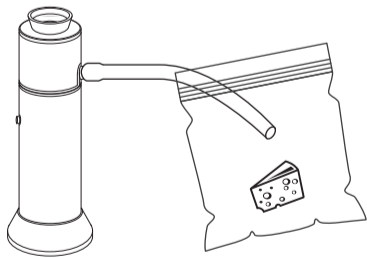

5. Place the smoking chips of your choice in the chip pocket.

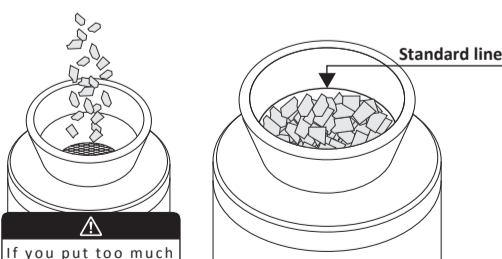


If you put too much smoking chips, the air intake may be blocked and no smoke may come out.


The proper amount of smoking chips is about the standard line of the chip pocket (a pinch).

6. Press the power switch to turn the power on.


*When you turn on the power, you will hear the sound which is the fan used to blow air.

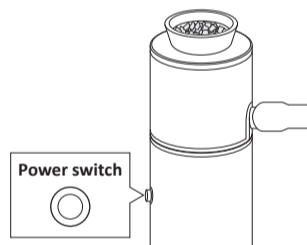


7. Place an ignition lighter close to the air intake and light the smoking chips.

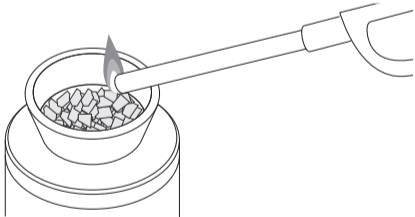


8. Once the container is fully filled with smoke, pull out the tube and seal it.

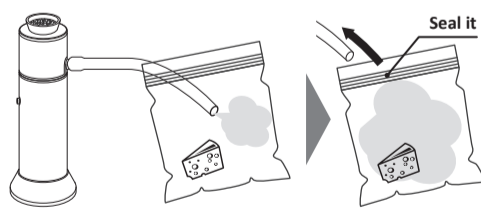

9. Turn the power off.

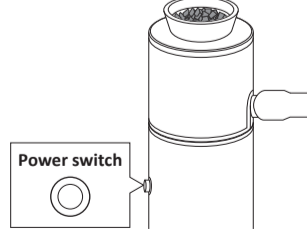

10. Make sure the smoke chips are completely burned out, remove the chip pocket, then remove the ashes from the interior of chip pocket. (Please use the supplied brush to remove the ashes.)

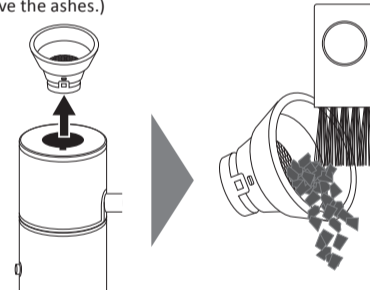

CAUTION!
The unit may be hot after use. Please be very careful with it.

11. Leave it for a few minutes. (Standard time: 3-10 minutes)
*The intensity of the aroma depends on how long it's been smoked. Please adjust to your liking.

12. Enjoy a very tasty smoked meal.



How to Maintain

Since the smoke comes in direct contact with food, be sure to clean the smoker after use and always keep it clean.


CAUTION

- Remove the batteries from the unit and wait the unit to cool down before cleaning.
- Do not wash the main unit in water.
- It cannot be boiled or washed in a dishwasher or dish dryer.
- Do not use chemical rags, strong detergents or solvents such as benzine or thinners.
- Do not use insecticides or exerting properties.
- Do not allow rubber or plastic to come in contact with the body for long periods of time, or leave stickers or tape on the body.

How to Maintain


Outside of the main unit

- Use a soft cloth or sponge to lightly wipe off any dirt on the outside of the body.
- For severe stains on the outside of the body, soak a soft cloth or sponge in lukewarm water diluted with neutral kitchen detergent and wring out well before wiping.

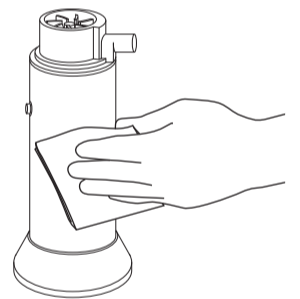

Upper unit / Chip pocket

- Use the included cleaning brush to remove any burning fumes, dust or ashes.
- For severe stains, wash in lukewarm water diluted with mild kitchen detergent, rinse well and dry thoroughly.

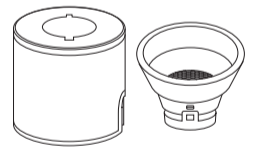

Fan

- Please use the included cleaning brush to remove the burnt residue and ashes.

Tube

- Wash in lukewarm water diluted with mild kitchen detergent, rinse well and dry thoroughly.

*If you are not going to use it for a long period of time, dry it thoroughly after clean and store it away from heat and humidity.

Trouble Shooting

Symptom	Reason	How to solve the problems
It doesn't work even after turning the power on.	Did you insert the alkaline batteries in the correct orientation?	Check the orientation of the batteries and insert them in the correct direction.
	Do you have enough battery power left?	Please insert new alkaline batteries.
There's no smoke coming out.	Are the remaining batteries capacity low and the wind is weak?	Please insert new alkaline batteries.
	Did you put too much smoking chips?	If you put too much smoking chips in, the air intake will be blocked and it won't allow air to flow through. Please change the amount of smoking chips to appropriate amount.
	Do you use non-smoking chips that are not for smoking?	Please use the right smoking chips.

***If the problem can't be solved after checking "trouble shooting", please stop using it and turn off the power, remove the batteries, and contact the shop where you purchased.**

PRODUCT SPECIFICATIONS

External Dimensions:

Φ2.68 x H6.54(inches)

Battery:

AA alkaline batteries x 2pcs

Continuous usage time:

About 3 hours

Power consumption:

0.6W

Materials:

Body: Nylon, ABS, aluminum

Metals: Zinc alloy

GREEN HOUSE CO., LTD.

<https://www.green-house.co.jp/en/>